

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

User's Manual



migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

Table of Contents

1	GENERAL	4
2	APPLICATION EXAMPLE	4
3	TECHNICAL DATA	5
3.1	Tips and Tricks	6
3.2	Device Configuration	7
3.3	Display Elements	8
3.4	System and Device Initialisation	9
3.5	Configuring the Ethernet Interface	10
3.6	Online Frame Layout	12
3.6.1	Header	13
3.6.2	Data Unit	14
3.6.3	Trail	14
3.7	Description of the Data Unit for Online Frames	15
3.7.1	Online Texts	16
3.7.1.1	Selecting a Character Set	16
3.7.1.2	Positioning the Cursor	17
3.7.1.3	Configuring Attributes	17
3.7.2	Texts, Graphics and Variables	18
3.7.2.1	Querying Text	18
3.7.2.2	Adjusting Speed for Moving Screen Texts	18
3.7.2.3	Querying Graphics	18
3.7.2.4	Querying Variables	19
3.7.2.5	Setting Variables	19
3.7.2.6	Increasing and Decreasing Variables	20
3.7.2.7	Positioning Variables	20
3.7.2.8	Querying Bar Graphs	21
3.7.2.9	Setting Bar Graph Values	21
3.7.3	Direct Graphic Control	24
3.7.3.1	Clear Display and Fill	24
3.7.3.2	Setting the Decimal Point	24
3.7.3.3	Reading Out the Decimal Point from the Display	24
3.7.3.4	Drawing a Rectangle	25
3.7.3.5	Scrolling	26
3.7.3.5.1	Displays with vertical Resolution < 64 Pixels	26
3.7.3.5.2	Displays with vertical Resolution > 64 Pixels	27
3.7.4	General Functions	28
3.7.4.1	Selecting Blinking Period Duration	28

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.7.4.2	Adjusting Brightness	28
3.7.5	Digital Inputs and Outputs	29
3.7.6	Macros	30
3.7.6.1	Start Macro Execution	30
3.7.6.2	Input-dependent Macro Jump	31
3.7.6.3	Pause during Macro Execution	33
3.7.6.4	Stop Macro Execution	34
3.8	Response Frames	34
3.9	Multiple ESC-Sequences	35
3.10	Examples	36
3.11	Parallel Interface	37
3.11.1	Timing at the Parallels Inputs	37
3.11.2	Input Level at the Parallel Inputs	37
3.11.3	Querying Text	38
3.11.4	Querying Graphics	39
3.11.5	Setting Variables	40
3.11.6	Querying Macros	41
4	CONNECTOR PIN ASSIGNMENTS	42
4.1	Serial Configuration / LEDs	45
5	APPENDIX	46
5.1	Displayable Characters	46
5.2	Factory Settings of the internal Interface	47
5.3	Maintenance and Care	48
5.4	Declaration of Conformity	49
5.5	Warranty / Liability	50
5.6	Versions Overview	51

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

1 General

The large format, graphics compatible display can be used universally for displaying production data, or as an information board.


Its modular design allows for cost-effective variants of various size, as well as different character heights and numbers of digits.

Especially important information can be colour-highlighted with the multicolour model (MC).

Display Functions

- Data transmission: Ethernet interface
- Configuration with PC software
- Text (different font sizes and types) and graphics can both be displayed.
- Standard font, flashing font, moving screen text, scrolling, inverse display
- Monitor display, stored texts and graphics can be queried, variables can be displayed and macros can be executed
- Variable size thanks to modular display design.

2 Application Example

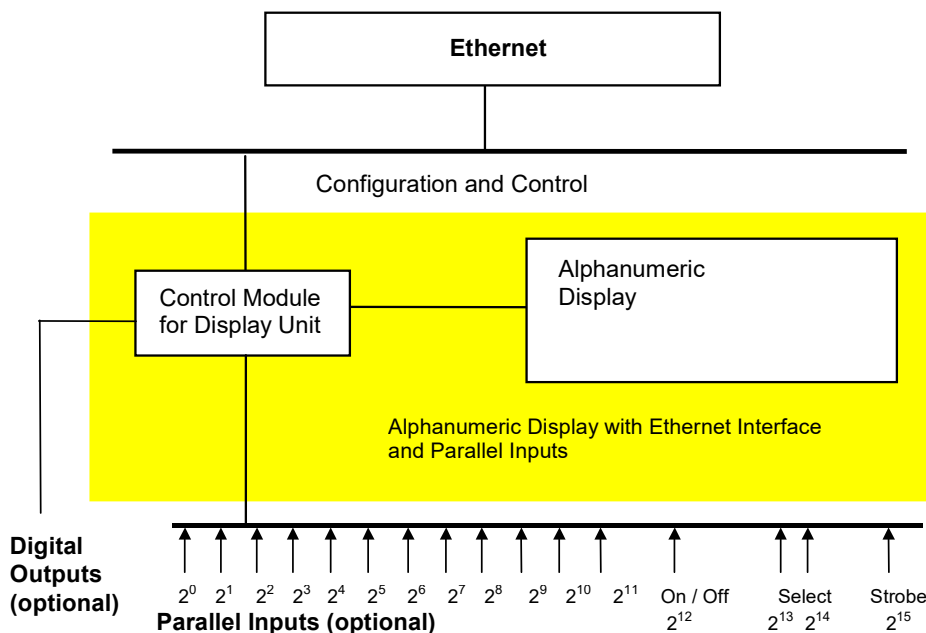

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3 Technical Data

General Specifications

Display type:	LED dot matrix display (max. 256x128 (HxV))
Display:	ASCII characters (Windows character set), graphics
Display colour:	type SC: single colour, type MC: multicolour
View:	single or double sided
Operating voltage:	230 V / 50 Hz, 110 V / 60 Hz or 24 VDC +/-20 %
Protocol:	TCP/IP Ethernet (version 2.0/IEEE 802.3)
Connection:	RJ45 twisted pair, 10 MBit/s
Upload:	TCP/IP Ethernet or RS232 (RS485 optionally) / USB
Housing:	powder coated aluminium
Housing dimensions:	see chapter "device configuration"
Mounting:	articulated arm or hanging mount bracket for wall mounting
Protection:	IP 54 or IP 65
Operating temperature:	0 to +50 °C (optionally -20 to +50 °C)
Storage temperature:	-25 to +70 °C
Graphics:	max. 1000
Texts:	max. 1000 (max. 255 moving screen texts)
Variables:	max. 1000
Macros:	max. 1000
Character sets:	max. 100

The available flash memory capacity for graphics, texts, variables, character sets and macros depends on the vertical resolution of the display:

- Vertical resolution ≤ 64 Pixel: 64 KByte
- Vertical resolution > 64 Pixel: 448 KByte

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.1 Tips and Tricks

- When putting on the power supply, the following sequence has to be observed:
 - Connect the power supply cable to the display.
 - Connect the power supply cable to the power supply.
- When disconnecting the power supply, the following sequence has to be observed:
 - Disconnect the power supply cable from the power supply.
 - Disconnect the power supply cable from the display.
- Be sure to use a valid colour when creating texts.
Example: Green lettering may not be used with a red, single colour display (no display appears in this case).
- When selecting X and Y coordinates for the purpose of positioning, the desired position must actually exist at the display (resolution in pixels).
- Graphics, texts and variables to be displayed must be positioned such that they fit properly into the display unit.

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.2 Device Configuration

Itemnumber : _____

Number of pixels (horizontal x vertical): _____ x _____

Type:

for inside use for outside use

Display colour:

red green yellow
 white blue

View:

single sided double sided

Operating voltage:

230 V / 50 Hz 110 V / 60 Hz 24 V DC

Protection:

IP40 IP54 IP65 IP _____

Operating temperature:

with type for inside use:	with type for outside use:	special version:
<input type="checkbox"/> 0...+50 °C (standard)	<input type="checkbox"/> -20...+50 °C (standard)	<input type="checkbox"/> _____ °C
	<input type="checkbox"/> -25...+50 °C (optional with heating)	

Housing dimensions:

_____ x _____ x _____ mm

Housing Material:

Aluminum profile Stainless steel Sheet metal

Interface:

Ethernet Parallele Schnittstelle

Download:

RS232 RS485 USB

Device address: _____ . _____ . _____ . _____

migra MPB EN TCP/IP




Large Format, Graphics Compatible Display with Ethernet Interface

3.3 Display Elements

Alphanumeric display modules with 16 x 16, 64 x 8 or 64 x 16 dot matrices are utilized.

Attention: As far as the software is concerned, there is no difference between modules with 16 pixel lines and modules with 8 pixel lines. The last 8 lines are simply not visible at a module with 8 pixel lines.

The following example depicts a module with 64 x 16 pixels including three different character heights:

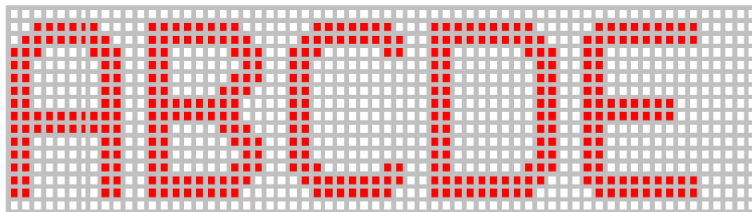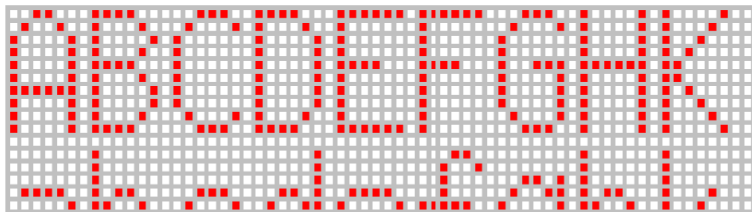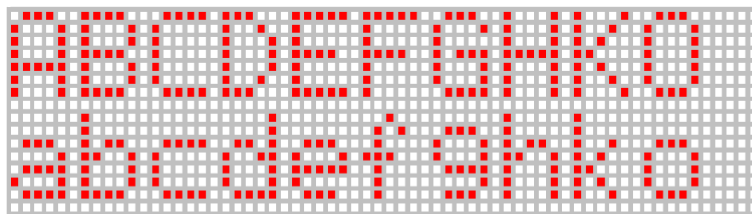

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.4 System and Device Initialisation

Internal memory and function tests are performed at the large format display during power-up (duration: less than 1 second).

If the display is not illuminated (and if the integrated function LED is slowly blinking, i.e. 0,5 Hz), the device is in boot mode. This indicates that the software currently stored on the integrated flash memory is incomplete. This may have been caused by a previously interrupted upload operation. If this is the case, uploading must be repeated (with the help of included PC software MKS).

After power-up, the first macro is executed (if one exists). If the display unit is to be cleared again immediately, a corresponding macro must exist!

The display unit then waits for valid output data from the user (via the interface).

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.5 Configuring the Ethernet Interface

The Ethernet interface must be configured before use (IP address, net mask and port number settings):

Advice for Windows 7 users:

The Telnet client must be activated:

*Start -> Control Panel -> Programs -> Turn Windows features on or off
-> Telnet Client*

- Switch the display unit on and connect it to the network hub with an RJ45 cable (1:1 cable) or directly to a PC (crosslink cable).
- Start the "MS DOS entry prompt" at your Windows PC.
With Windows 7 you must have extended rights:
*Start -> All Programs -> Accessories -> double-click at Command Promp
-> Run as Administrator*

- Enter the desired IP address for the display unit to the ARP table:
ARP -S XXX.XXX.XXX.XXX xx-xx-xx-xx-xx-xx <CR>

XXX.XXX.XXX.XXX : desired IP address
xx-xx-xx-xx-xx-xx : display unit's Ethernet address
(see label next to the RJ45 socket)

- Establish a Telnet connection to port 1:
TELNET XXX.XXX.XXX.XXX 1 <CR>

This connection will fail (disconnect within 3 seconds). However, the display unit's IP address is temporarily changed.
Close the Telnet window after acknowledging the error message.

- Establish a Telnet connection to port 9999:
TELNET XXX.XXX.XXX.XXX 9999 <CR>

After the connection has been established, immediately press the enter key (within 5 seconds) in order to enter the setup mode.

- **Please do never select item "7" (Defaults). These settings do not match to the display.**
In case of an error you can find the factory settings in chapter "Factory Settings of internal Interface".
- Enter "0" (server configuration).
- Enter the desired IP address and press the enter key.

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

- Repeatedly press the enter key until „Netmask: Number of Bits for Host Part (...)“ appears. Enter here the number of free bits for the IP address, f.e. „8“ for the netmask 255.255.255.0 (=11111111.11111111.11111111.00000000) or „11“ for the netmask 255.255.248.0 (=11111111.11111111.11111000.00000000) and press the enter key.
- Repeatedly press the enter key until “Your choice?” appears.
- Enter “1” (channel 1 configuration).
- Repeatedly press the enter key until “Port No (10001)?” appears.
- Enter the desired port number and press the enter key.
- Repeatedly press the enter key until “Your choice?” appears.
- Press “9” to save all settings (-> the Telnet connection is interrupted).

Configuration of the Ethernet interface is now complete.

From now on, the control frame can be transmitted to the display via the selected IP address and the selected port.

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.6 Online Frame Layout

Each of the frames transmitted to the large format display unit consists of 3 parts:

Header	Data Unit	Trail
---------------	------------------	--------------

Frames transmitted to the MIGRA are not evaluated by the device until 3 to 240 ms after the last frame byte has been received (depending upon baud rate settings). The pause between the individual frame bytes may not exceed this period of time! The pause between the individual frames must exceed this period of time!

The next frame can be transmitted immediately after the response frame has been received.

If no response frame is used, the MIGRA is not ready to receive a new frame until the last received frame has been completely processed. For example, if a large graphic is displayed, a longer waiting period is required than would be the case for reading out an "online character". As a rule, a pause of „receiving timeout“ + 150 ms between frames is sufficient.

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.6.1 Header

STX	DA	SA	FC	LEN-H (optional)	LEN-L (optional)
Start of Text	Destination Address	Source Address	Frame Control	High Nibble Number of Data Bytes	Low Nibble Number of Data Bytes
00000010 _B	1XXXXXXXX _B	1XXXXXXXX _B	1XXXXXXXX _B	1111XXXX _B	1111XXXX _B

- STX:** Start of Text: 02_H
- DA:** Destination Address:
(normally set to 81_H when an Ethernet interface is utilised)
- SA:** Source Address:
(normally set to 80_H when an Ethernet interface is utilised)
- FC:** Frame Control: control for the communications sequence
 Bit 7: set permanently to 1
 Bits 6 - 2: reserved (0)
 Bit 1: 0 -> do not use checksum
 (do not use LEN-H/L, CHK-H/L)
 1 -> use checksum
 (use LEN-H/L, CHK-H/L)
 Bit 0: 0 -> do not send response
 1 -> send response
- LEN-H:** High nibble length: number of high nibble data bytes, bits 4 through 7 must be set
 (e.g. number of data bytes = 26_H ⇒ high nibble = 2 ⇒ 11110010_B)
- LEN-L:** Low nibble length: number of low nibble data bytes, bits 4 through 7 must be set
 (e.g. number of data bytes = 26_H ⇒ low nibble = 6 ⇒ 11110110_B)

LEN-H und LEN-L only need to be transmitted if a checksum is used. If bit 1 in the FC byte is not set, LEN-H and LEN-L may not be transmitted!

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.6.2 Data Unit

Data Unit
Display Data
1B _H , 0A _H , 0D _H , 20 _H - FF _H

Data Unit: Data bytes (ASCII characters, control commands)

3.6.3 Trail

If bit 1 is not set in the FC byte (no checksum):

ETX
End of Text
00000011 _B

End of Text: 03_H.

If bit 1 is set in the FC byte (use checksum):

CHK-H	CHK-L	ETX
High nibble from sum of all previous bytes (without STX)	Low nibble from sum of all previous bytes (without STX)	End of Text
1111XXXX _B	1111XXXX _B	00000011 _B

Checksum = low byte for sum of DA, SA, FC, LEN-H, LEN-L and all data bytes

CHK-H: High nibble for checksum: bits 3 through 0, bits 4 through 7 must be set (1)

CHK-L: Low nibble for checksum: bits 3 through 0, bits 4 through 7 must be set (1)

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.7 Description of the Data Unit for Online Frames

The display must be configured with the PC software (define character sets, graphics, texts, variables and macros). The individual elements included in the configuration which is downloaded to the display can then be used by the frames described in this chapter.

The display is delivered with a pre-programmed default configuration. However, you can create an individualised configuration for your own application and download it to the display unit with the PC software. The existing default configuration is overwritten during this process.

All indices are 0-based, i.e. "000" is transmitted in order to query the first text. The position 0 / 0 (X / Y) is the upper left-hand pixel at the display unit. All variables, graphics and texts are written to the display starting at the selected X and Y coordinates, and then proceed down and to the right. The display's physical limits may not be exceeded during this process (otherwise no display appears).

Note: Text, variable, graphic, character set and bar graph indices in the PC software and at the controlling are 0-based!

Frames which contain no online text (ASCII codes 20_h through FF_h, 10_h and 13_h), start with the escape character (1B_h) as the first data byte.

If response frames are used, the next frame can be transmitted immediately after receipt of the response. However, this may lead to delays in the execution of macros, moving screen texts and scrolling if the frame sequence is too fast.

If response telegrams are not used, a pause must be inserted between the frames as described in chapter "Online Frame Layout".

Data bytes included in the data unit must be in ASCII format!

Example, Specifying Position:

... 31_h 32_h 33_h ... must be transmitted for position 123_D!
(ASCII characters "1", "2" and "3").

Refer to chapter "Displayable Characters" for a table of displayable ASCII characters!

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.7.1 Online Texts

Online texts are transmitted without an escape sequence (ASCII codes 20_H – FF_H, 0A_H, 0D_H).

Transmitted ASCII characters are displayed with the current character set at the current cursor position in consideration of current attributes.

Line breaks are accomplished with the help of ASCII code 0A_H or 0D_H by transmitting the escape sequence for setting cursor position (ESC-“C”).

If the display limits are exceeded, read-out is continued at the next line, or at the first line of the display unit.

3.7.1.1 Selecting a Character Set

Byte 1	Byte 2	Byte 3	Byte 4
ESC	Function	Character set no. tens	Character set no. ones
1B _h	“Z”: normal character width “z”: uniform character width	“0” – “9”	“0” – “9”

Three character sets are included with the display unit upon delivery:

50 mm (1.97”) character set (character set “Z00”, “z00”)

75 mm (2.95”) character set (character set “Z01”, “z01”)

100 mm (3.94”) character set (character set “Z02”, “z02”).

Existing character sets are overwritten with the new character sets if a new configuration is downloaded to the display unit!

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.7.1.2 Positioning the Cursor

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Byte 8
ESC	Function	X Position hundreds	X Position tens	X Position ones	Y Position hundreds	Y Position tens	Y Position ones
1B _h	"C"	"0" – "9"	"0" – "9"	"0" – "9"	"0" – "9"	"0" – "9"	"0" – "9"

3.7.1.3 Configuring Attributes

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
ESC	Function	Foreground colour	Background colour	Blinking
1B _h	"A"	"0": black "1": green "2": red "3": yellow	"0": black "1": green "2": red "3": yellow "T": transparent	"0": static "1": blinking

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.7.2 Texts, Graphics and Variables

3.7.2.1 Querying Text

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6
ESC	Function	Display / Clear	Text no. hundreds	Text no. tens	Text no. ones
1B _h	"T"	"+": display "-": clear	"0" – "9"	"0" – "9"	"0" – "9"

When the display is cleared, the surface at which the text is displayed is overwritten with the current online background colour (from the last "ESC-A" frame)! Black is used if the background colour has been set to transparent!

3.7.2.2 Adjusting Speed for Moving Screen Texts

Byte 1	Byte 2	Byte 3
ESC	Function	Moving Screen Speed
1B _h	"L"	"0": static "1": 1.8 seconds : "9": 0.2 seconds

All moving screen texts are set into motion at the selected speed. The default setting is "9" (0.2 seconds per step), and this setting is always activated each time the device is switched on.

3.7.2.3 Querying Graphics

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6
ESC	Function	Display / Clear	Graphic no. hundreds	Graphic no. tens	Graphic no. ones
1B _h	"G"	"+": display "-": clear	"0" – "9"	"0" – "9"	"0" – "9"

When the display is cleared, the surface at which the text is displayed is overwritten with the current online background colour (from the last "ESC-A" frame)! Black is used if the background colour has been set to transparent!

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.7.2.4 Querying Variables

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6
ESC	Function	Display / Clear	Variable no. hundreds	Variable no. tens	Variable no. ones
1B _h	"V"	"+": display "-": clear	"0" – "9"	"0" – "9"	"0" – "9"

When the display is cleared, the surface at which the variable is displayed is overwritten with the current online background colour (from the last "ESC-A" frame)! Black is used if the background colour has been set to transparent!

3.7.2.5 Setting Variables

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5.	Byte 6	Byte 7...133
ESC	Function	Set	Variable no. hundreds	Variable no. tens	Variable no. ones	Variable values
1B _h	"V"	"=": set	"0" – "9"	"0" – "9"	"0" – "9"	20 _h ...FF _h

Variables may include up to 127 characters (the length of the variables is set during configuration).

The same number of characters is overwritten in the variable as is transmitted with the frame.

In order to avoid flickering, the old display is not cleared until after the new display is read out!

The background colour used with the variables may not be transparent, and a character set with uniform character width should be used in order to assure correct display. Otherwise, the variable must be cleared prior to changing, and then displayed once again!

Variable content is stored to RAM only. After the device has been switched off and back on again, the variables are returned to their pre-configured values.

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.7.2.6 Increasing and Decreasing Variables

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6
ESC	Function	Increase / Decrease	Variable no. hundreds	Variable no. tens	Variable no. ones
1B _h	„V“	“I”: increase or “D”: decrease	“0” – “9”	“0” – “9”	“0” – “9”

Only numeric characters are changed. Letters, commas etc. are skipped. Numeric characters are interpreted as an single decimal number. This decimal number is increased or decreased by 1.

In order to avoid flickering, the old display is not cleared until after the new display is read out!

The background colour used with the variables may not be transparent, and a character set with uniform character width should be used in order to assure correct display. Otherwise, the variable must be cleared prior to changing, and then displayed once again!

Variable content is stored to RAM only. After the device has been switched off and back on again, the variables are returned to their pre-configured values.

3.7.2.7 Positioning Variables

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5.	Byte 6
ESC	Function	Set	Variable no. hundreds	Variable no. tens	Variable no. ones
1B _h	“V”	“P”: set position	“0” – “9”	“0” – “9”	“0” – “9”

Byte 7	Byte 8	Byte 9	Byte 10	Byte 11	Byte 12
X position hundreds	X position tens	X position ones	Y position hundreds	Y position tens	Y position ones
“0” – “9”	“0” – “9”	“0” – “9”	“0” – “9”	“0” – “9”	“0” – “9”

Variable positioning is stored to RAM only. After the device has been switched off and back on again, the variables are returned to their pre-configured positions.

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.7.2.8 Querying Bar Graphs

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6
ESC	Function	Display / Clear	Bar graph no. hundreds	Bar graph no. tens	Bar graph no. ones
1B _h	"W"	"+": display "-": clear	"0" – "9"	"0" – "9"	"0" – "9"

When a bar graph is displayed, the last bar graph value transmitted to the display is used (or the reference value after a reset). If a variable is linked to the bar graph, it is also displayed accordingly.

When the display is cleared, the surface at which the bar graph is displayed is overwritten with the current online background colour (from the last "ESC-A" frame)! Black is used if the background colour has been set to transparent! If a variable is linked to the bar graph, it is cleared from the display as well.

Up to 255 bar graphs are possible (numbers 0 through 254).

The maximum variable length for linked variables is 127 characters.

3.7.2.9 Setting Bar Graph Values

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7
ESC	Function	Set	Bar graph no. hundreds	Bar graph no. tens	Bar graph no. ones	Type of transmitted data
1B _h	"W"	"=": set	"0" – "9"	"0" – "9"	"0" – "9"	"A": ASCII coded decimal value

Byte 8	Byte 9	Byte 10	Byte 11	Byte 12	Byte 13
Plus or minus sign	Decimal value ten thousands	Decimal value thousands	Decimal value hundreds	Decimal value tens	Decimal value ones
"+", "-"	"0" – "9"	"0" – "9"	"0" – "9"	"0" – "9"	"0" – "9"

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

If the bar graph is not yet displayed, it is refreshed automatically.

The bar graph is displayed according to its positioning between the minimum and maximum limits selected in the configuration. The start position of the bar graph is always positioned at the reference value selected in the configuration. The end of the bar graph is determined by the transmitted value.

The bar graph is displayed in the selected colour at the reference value position.

If the bar graph exceeds any of the colour limits (measured from the reference point), it is displayed in the colour selected for the respective colour limit as of this point.

Four colour limits can be defined. Each colour limit must lie within the minimum to maximum limit range:

MIN limit \leq colour limit 1 \leq colour limit 2 \leq colour limit 3 \leq colour limit 4 \leq MAX limit

Observance of this sequence is assured by the included PC software!

In addition to standard multicolour bar graphs, display is also possible as a single colour bar graph or a single colour marker (depending upon configuration data – see PC software). In this case, the colour of the bar graph or the marker is the same as the colour of the end of the bar graph for the standard bar graph display.

If the minimum limit is fallen short of or the maximum limit is exceeded, a blinking marker appears at the respective limit.

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

If a variable is linked to the bar graph, it is changed accordingly as well:

All digits occupied with the characters “#” and “*” are overwritten with the new value starting at the right.

If a variable is preset to “#”, preceding zeros are suppressed (i.e. replaced with blanks).

If a variable is preset to “*”, preceding zeros are displayed.

If a digit is occupied by the dollar sign (\$), it is overwritten with the new preceding plus or minus sign.

Example:	Variable preset	= “\$ #*,* m/s”
	Value	= -9 = “-00009”
	=> Display	= “- 0,9 m/s”

If minimum or maximum values are violated, the current values blinks at the display.

The background colour used for variables may not be transparent, and a character set with uniform character width should be used in order to assure correct display.

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.7.3 Direct Graphic Control

3.7.3.1 Clear Display and Fill

Byte 1	Byte 2	Byte 3
ESC	Function	Colour
1B _h	"F"	"0": black "1": green "2": red "3": yellow

3.7.3.2 Setting the Decimal Point

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Byte 8	Byte 9
ESC	Function	Colour	X pos. hundreds	X pos. tens	X pos. ones	Y pos. hundreds	Y pos. tens	Y pos. ones
1B _h	"P"	"0": black "1": green "2": red "3": yellow	"0" - "9"	"0" - "9"	"0" - "9"	"0" - "9"	"0" - "9"	"0" - "9"

3.7.3.3 Reading Out the Decimal Point from the Display

Query:

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Byte 8	Byte 9
ESC	Function	Query code	X pos. hundreds	X pos. tens	X pos. ones	Y pos. hundreds	Y pos. tens	Y pos. ones
1B _h	"P"	"?"	"0" - "9"	"0" - "9"	"0" - "9"	"0" - "9"	"0" - "9"	"0" - "9"

Response:

Colour Information (with header and trail)

Byte 1	Byte 2	Byte 3
ESC	Function	Colour
1B _h	"P"	"0": black "1": green "2": red "3": yellow

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.7.3.4 Drawing a Rectangle

Byte 1	Byte 2	Byte 3	Byte 4
ESC	Function	Foreground colour (perimeter)	Background colour (filling)
1B _h	"R"	"0": black "1": green "2": red "3": yellow	"0": black "1": green "2": red "3": yellow "T": transparent

Upper Left-Hand Corner Position:

Byte 5	Byte 6	Byte 7	Byte 8	Byte 9	Byte 10
X position hundreds	X position tens	X position ones	Y position hundreds	Y position tens	Y position ones
"0" – "9"	"0" – "9"	"0" – "9"	"0" – "9"	"0" – "9"	"0" – "9"

Lower Right-Hand Corner Position:

Byte 11	Byte 12	Byte 13	Byte 14	Byte 15	Byte 16
X position hundreds	X position tens	X position ones	Y position hundreds	Y position tens	Y position ones
"0" – "9"	"0" – "9"	"0" – "9"	"0" – "9"	"0" – "9"	"0" – "9"

The perimeter of the rectangle is drawn with the foreground colour.
The rectangle is filled with the background colour.

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.7.3.5 Scrolling

3.7.3.5.1 Displays with vertical Resolution < 64 Pixels

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Byte 8	Byte 9
ESC	Function	Direction	Speed	Increment	Start line tens	Start line ones	End line tens	End line ones
1B _h	"S"	"0": off "1": up "2": down	"0": static "1": 1.8 sec "9": 0.2 sec	"1": 1 pixel "9": 9 pixels "0": no scrolling	"0"-"9"	"0"-"9"	"0"-"9"	"0"-"9"

Scrolls once through a portion of the screen from the start line to the end line (speed = "static") or cyclically in steps with a value ranging from 1 to 9 pixels.

The Y positions of the first and last pixel lines within the scrolling range define the start and end lines (end line > start line!). Only the last selected scrolling range is used!

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.7.3.5.2 Displays with vertical Resolution > 64 Pixels

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Byte 8	Byte 9	Byte 10	Byte 11
ESC	Function	Direction	Speed	Increment	Start line hundreds	Start line tens	Start line ones	End line hundreds	End line tens	End line ones
1B _h	„S“	“0”: off “1”: up “2”: down	“0”: static “1”: 1.8 sec “9”: 0.2 sec	“1”: 1 pixel “9”: 9 pixels “0”: no scrolling	“0”-“9”	“0”-“9”	“0”-“9”	“0”-“9”	“0”-“9”	“0”-“9”

Scrolls once through a portion of the screen from the start line to the end line (speed = “static”) or cyclically in steps with a value ranging from 1 to 9 pixels.

The y position of the first and last pixel lines within the scrolling range define the start and end lines (end line > start line!). Only the last selected scrolling range is used!

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.7.4 General Functions

3.7.4.1 Selecting Blinking Period Duration

Byte 1	Byte 2	Byte 3
ESC	Function	Blinking period duration
1B _h	"B"	"0": 2 seconds : "9": 0.2 seconds

The selected blinking period duration applies to all blinking texts.
The default value ("9") is activated each time the device is switched on.

3.7.4.2 Adjusting Brightness

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6
ESC	Function	Colour	Brightness hundreds	Brightness tens	Brightness ones
1B _h	"H"	"1" – "2"	"0" – "9"	"0" – "9"	"0" – "9"

Within a range of 0 to 100% for each of the following colours:

"1" = green

"2" = red

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.7.5 Digital Inputs and Outputs

Large format display with a vertical resolution of up to 64 pixels can optionally be equipped with up to 16 digital inputs and 16 digital outputs. Large format display with a vertical resolution of more than 64 pixels can optionally be equipped with up to 16 digital inputs.

Request Frame

Byte 1	Byte 2	Byte 3	Byte 2+n	Byte 18
ESC	Function	Output bit 1	Output bit n	Output bit 16
1Bh	"D"	"0" or "1"	"0" or "1"	"0" or "1"

"0" -> clear output
 "1" -> set output
 else -> retain previous output status

Response: (FC byte, bit 0 = 1)

Byte 1	Byte 2	Byte 3	Byte 2+n	Byte 18
ESC	Function	Input bit 1	Input bit n	Input bit 16
1Bh	"D"	"0" or "1"	"0" or "1"	"0" or "1"

"0" -> input cleared
 "1" -> input set

The output bits are used to switch the digital outputs (if included).

After switching the device on, all outputs are cleared (0).

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.7.6 Macros

Macros are predefined command sequences included in the device configuration.

They are analogous to the data units in the online frames.

The first macro line is executed after the device is switched on (if one exists). Subsequent macro lines are executed every 100 ms. A macro line can consist of several commands. Macro execution is stopped after the last macro line has been executed.

3.7.6.1 Start Macro Execution

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
ESC	Function	Macro no. hundreds	Macro no. tens	Macro no. ones
1Bh	"M"	"0" – "9"	"0" – "9"	"0" – "9"

Execution starts with the indicated macro.

Skipping is also possible during macro execution through the use of this command within a macro sequence.

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.7.6.2 Input-dependent Macro Jump

Option A:

The macro execution is continued at the digit „Macro no.“ („000“-„999“), if the indicated input („0“-„F“) is equal to „0“ or „1“.

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6
ESC	Function	Macro no. hundreds	Macro no. tens	Macro no. ones	„E“ (fixed)
1B _h	„M“	„0“-„9“	„0“-„9“	„0“-„9“	„E“

→

Byte 7	Byte 8	Byte 9
No. of queried Input (0-15)	„=“ (fixed)	queried status (0/1)
„0“-„F“	„=“	„0“ or „1“

Option B:

The macro execution is continued at the digit „Macro no.“ („000“-„999“), if the indicated input was read in at least once with the status „0“ or „1“ since the last query (with exactly this command).

The digital inputs are usually read in every 100 ms.

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6
ESC	Function	Macro no. hundreds	Macro no. tens	Macro no. ones	„E“ (fixed)
1B _h	„M“	„0“-„9“	„0“-„9“	„0“-„9“	„E“

→

Byte 7	Byte 8	Byte 9
No. of queried Input (0-15)	„#“ (fixed)	queried status (0/1)
„0“-„F“	„#“	„0“ or „1“

Note:

If one of these commands (option A oder B) was called from within the macro list, the next macro is executed immediately (without waiting 100 ms and without reading the digital inputs again).

After 30 of these macros („ESC-MXXXE...“) have been executed in sequence from within the macro list, a break of 100 ms happens and the digital inputs are read in again.

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

Example:

	Macro no.	Macro command
1	000	ESC-M005E0=1
2	001	ESC-M007E1#1
3	002	ESC-M009E2=1
4	003	ESC-w010
5	004	ESC-M000
6	005	ESC-T+000
7	006	ESC-M000
8	007	ESC-T+001
9	008	ESC-M000
10	009	ESC-F0
11	010	ESC-M000

- The Inputs 0 to 2 are queried every 1 second.
- If Input 0 is set, text „000“ is displayed.
- If Input 1 is set, text „001“ is displayed.
This also happens, if the input was set only for a short time (at least 100 ms), for example during the delay time (1 second).
- If Input 2 is set, the display is cleared.

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.7.6.3 Pause during Macro Execution

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5
ESC	Function	Pause duration hundreds	Pause duration tens	Pause duration ones
1B _h	"w"	"0" – "9"	"0" – "9"	"0" – "9"

Sets the time which elapses until the next macro is executed (in steps of 100 ms).

A macro is normally executed every 100 ms until the last macro has been completed.

After the ESC + "w..." sequence, macro execution is stopped for the specified pause duration.

This sequence can be used as part of a macro, as well as part of a receive frame.

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.7.6.4 Stop Macro Execution

Byte 1	Byte 2
ESC	Function
1B _h	"E"

3.8 Response Frames

A response frame is only transmitted if the corresponding bit (bit 0) has been set in the FC byte, and if the broadcast address (127) has not been used as the destination address.

Example: display unit address = 1
 master address = 0

Response frame from the display unit to the master:

STX	DA	SA	FC	Data-Unit	ETX
Start of text	Destination address	Source address	Frame control	Error code	End of text
00000010 _B	10000000 _B	10000001 _B	10000000 _B		00000011 _B
2	128	129	128	"0" – "5"	3

Error Codes and their Meanings:

Value (ASCII character)	Meaning
"0"	No error
"1"	Incorrect checksum
"2"	Reserved
"3"	Incorrect number of data bytes (LEN-H/L), invalid escape sequence
"4"	Element (text, variable, graphic, character set or macro) is missing, invalid parameter
"5"	Invalid flash

The queried information is returned instead of error code "0" for frames which require a response ("reading out decimal point from the display", "digital inputs and outputs").

The error code in the response frame always relates to the last partition frame.

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.9 Multiple ESC-Sequences

It is possible to combine several partition frames in one complete frame. This applies to the standard controlling and to the macro list.

The partition frames can be a ESC-sequence or a online text each.

If a online text shall follow after the ESC-sequence, it must be separated with the "separator sign" $31_D = 1F_H$ from the ESC-sequence. The separator itself is not evaluated.

The maximum length of the data unit of a complete frame is 230 characters.

Example:

Data unit = $1B_H$ „Z01“ $1B_H$ „C002003“ $1B_H$ „A301“ $1F_H$ „online text“

=> An "online text" with character set 1, on cursor position x=2, y=3 with foreground colour „yellow“ and background colour „black“ is displayed (blinking).

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.10 Examples

Read out online text to the large format display unit at address 1:

1. Without checksum, with response

STX	DA	SA	FC	Data-Unit	ETX
Start of text	Display unit address	Source address	Frame control	"Hello world"	End of text
00000010 _B	10000001 _B	10000000 _B	10000001 _B		00000011 _B
2	129	128	129	...	3

Response from large format display unit if no errors occur:

STX	DA	SA	FC	Data-Unit	ETX
Start of text	Destination address	Source address	Frame control	Error code	End of text
00000010 _B	10000000 _B	10000001 _B	10000000 _B		00000011 _B
2	128	129	128	„0“	3

2. With checksum and response (in short form)

The character **"A"** is to be displayed at the large format display unit at address 1:

Master : 02 81 80 83 F0 F1 **41** FA F6 03
 Display unit: 02 80 81 80 30 03


migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.11 Parallel Interface

Functions can be initialised via the 16 digital inputs, which are analogous to the online frames used for the serial interface.

3.11.1 Timing at the Parallels Inputs

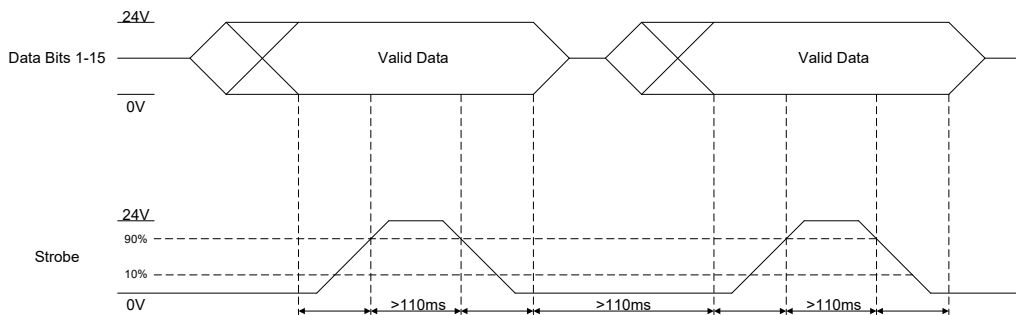


3.11.2 Input Level at the Parallel Inputs

Level	Voltage Range
U (low)	+ 0 to 1.6 V DC
U (high)	+ 18 to 30 V DC


migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.11.3 Querying Text

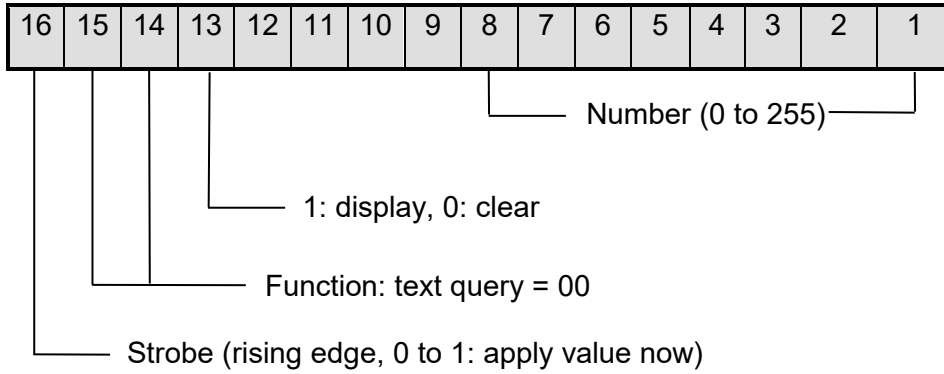


For example, the following assignments are used to display text 12:

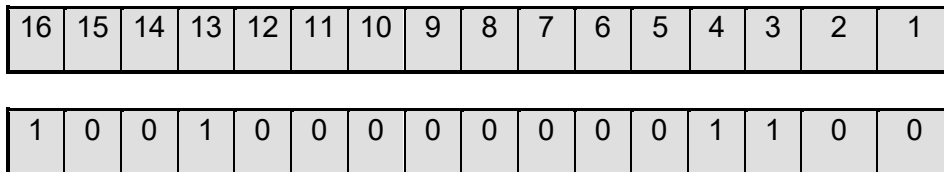


migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

3.11.4 Querying Graphics

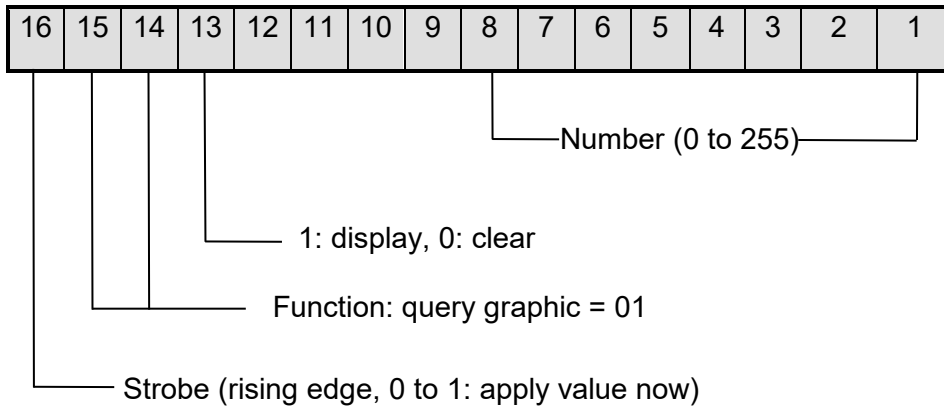

For example, the following assignments are used to clear graphic 7:

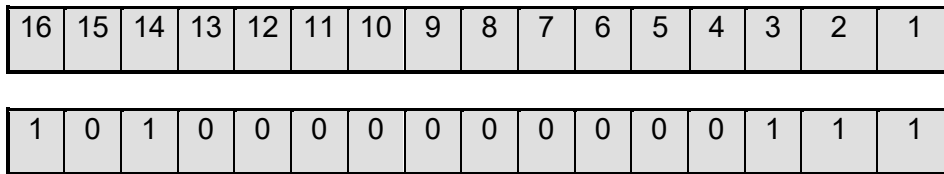


migra MPB EN TCP/IP


Large Format, Graphics Compatible Display with Ethernet Interface

3.11.5 Setting Variables


Variables with a single character can be set directly:

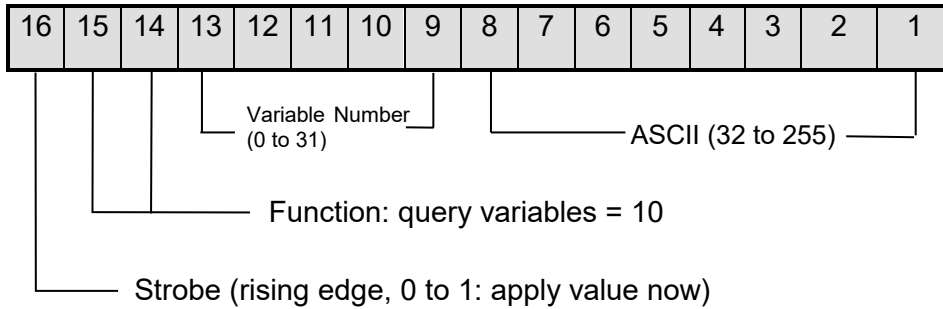

Example: The variable at the fourth digit is to be changed at a display with 6 variables.




Each digit is implemented by means of a variable (numbers 0 through 5). In order to display a “9” at the fourth digit, ASCII value 39_H must be assigned to variable 3 (fourth digit). The inputs must be set up as follows to this end:

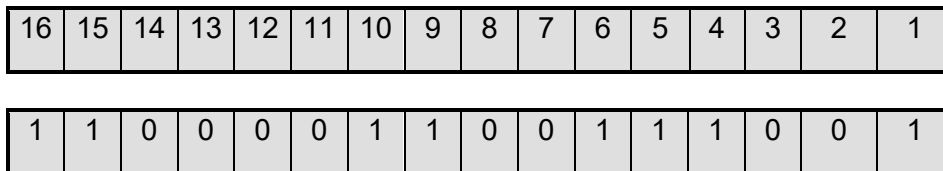

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface


3.11.6 Querying Macros

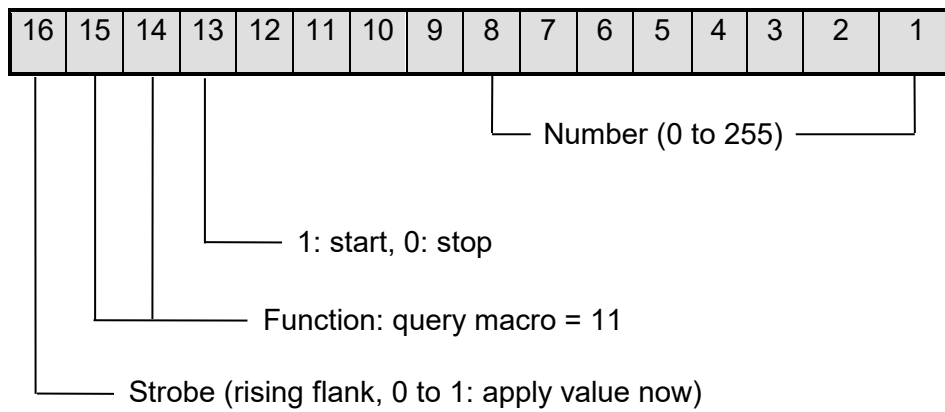


migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

4 Connector Pin Assignments

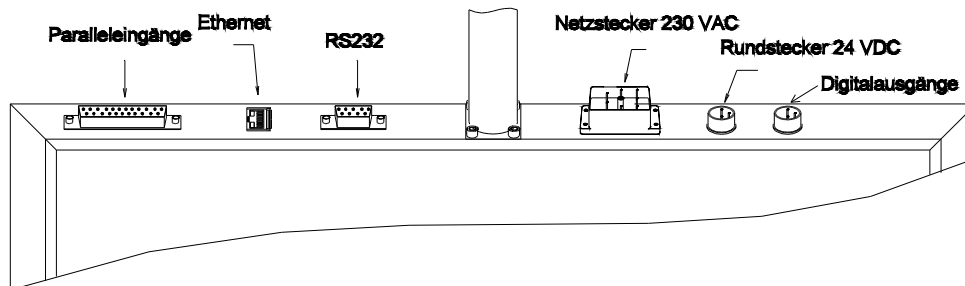

Ethernet Socket (interface)

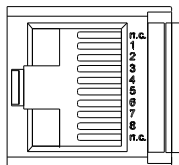


PIN	Assignment
1	Tx +
2	Tx -
3	Rx +
4	n.c.
5	n.c.
6	Rx -
7	n.c.
8	n.c.

Note: The two outer pins at the Ethernet socket are not used (see above drawing for identification of pin 1).

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface


9-Pin. Sub-Miniature Plug Connector RS232 (RS485 optional)



PIN	RS232	RS485
1	n.c.	n.c.
2	RxD	n.c.
3	TxD	Rx+ / Tx+
4	n.c.	n.c.
5	GND	GND *
6	n.c.	+5 VDC *
7	n.c.	n.c.
8	n.c.	Rx- / Tx-
9	n.c.	n.c.


* If an external bus termination is needed, these pins can be used.

7-Pole Mains Plug (230 V AC)



PIN	Assignment
1	L1
2	N
(PE)	PE


3-Pin Circular Plug (24 V DC) **



PIN	Assignment
1	GND
2	+ 24 V DC
3	PE

** Only with 24 V DC power supply

5-Pin Circular Plug




PIN	Assignment
1	Relay 1, normally open, a
2	Relay 1, normally open, b
3	Relay 2, normally open, a
4	Relay 2, normally open, b
5	n.c.

Relay 1 / 2 is controlled by digital output 1 / 2 (frame: ESC+“D”, optionally expandable).

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

25-Pin Sub-Miniature Plug Connector (only with optional parallel inputs)

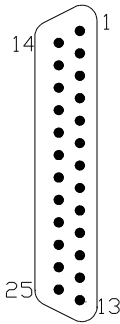

Pin 1	Binary data 2^0	
Pin 2	Binary data 2^1	
Pin 3	Binary data 2^2	
Pin 4	Binary data 2^3	
Pin 5	Binary data 2^4	
Pin 6	Binary data 2^5	
Pin 7	Binary data 2^6	
Pin 8	Binary data 2^7	
Pin 9		Variable no. 2^0
Pin 10		Variable no. 2^1
Pin 11		Variable no. 2^2
Pin 12		Variable no. 2^3
Pin 13	Display / clear (1: display, 0: clear)	Variable no. 2^4
Pin 14	Function selection 2^0	
Pin 15	Function selection 2^1	
Pin 16	Strobe (1: apply value now)	
Pin 17-24	n.c.	
Pin 25	GND	


- Binary data:** Data with a value ranging from 0 to 255 as the number of a text, a graphic or a macro, or as the ASCII character of a variable to be displayed.
- Display / clear:** Displays or clears the selected object.
- Query text:** Displays or clears the selected text.
- Query graphic:** Displays or clears the selected graphic.
- Query variable:** Displays the ASCII character defined by means of binary data at the position of the selected variable.
- Query macro:** Starts / stops macro execution at the selected macro.
- Strobe:** If high level is applied to pin 16 (> 110 ms), the selected data are applied (command is executed no later than 100 ms after occurrence of the rising edge, except when the display unit has not yet completed processing of a previous command).

Please refer to chapter "Parallel Interface" for details concerning the parallel inputs.

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

4.1 Serial Configuration / LEDs

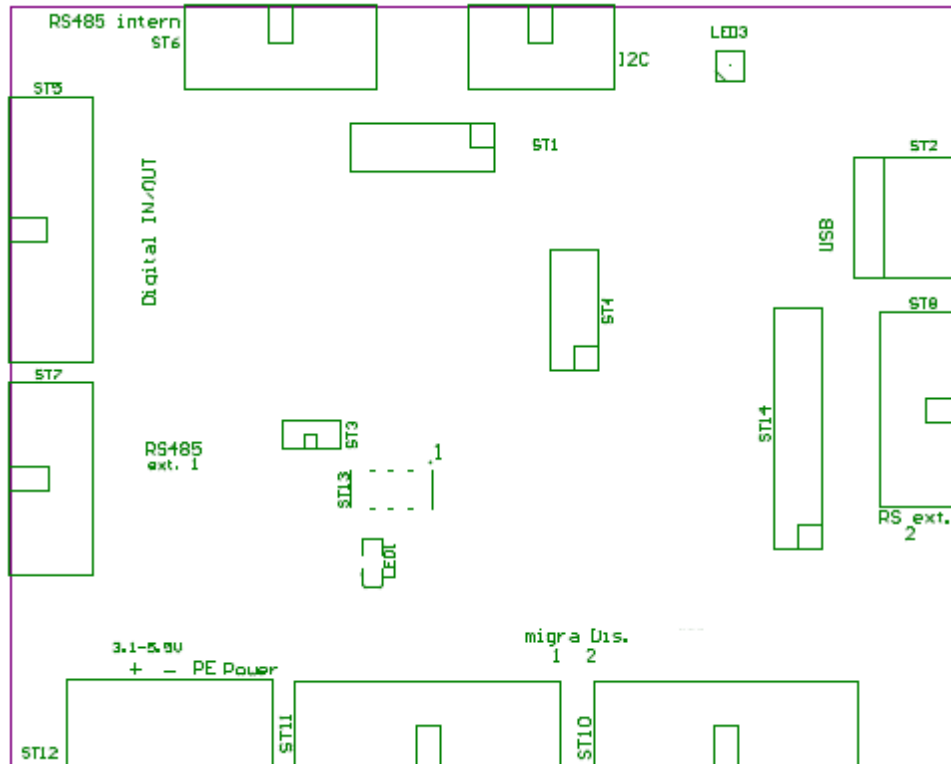

LED	Function / Description	
LED 1 (green)	Power-up: Normal operation: Boot mode: Software upload: Configuration: Defective MKS: Defective Micon:	Blinks at a frequency of approx. 2,5 Hz Blinks at a frequency of approx. 5 Hz Blinks at a frequency of approx. 0,5 Hz Flickers during the upload Blinks with an Error Code: 1x Blinks with an Error Code: 2x
LED 3 (blue)	Video-signal: No Video-signal:	On Off

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

5 Appendix

5.1 Displayable Characters

Data bytes are ASCII coded.

Character set: all ASCII characters within a range of 20H to FFH.

Sample character set:

		Higher		bin	0000	0001	0010	0011	0100	0101	0110	0111	1000	1001	1010	1011	1100	1101	1110	1111
		bin	hex	hex	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
bin	hex	xxxx0000	0	X	X			0	@	P	.	p	X	X	X	X	X	X	X	X
xxxx0001	1	X	X			!	1	A	Q	a	q	ü	X	X	X	X	X	X	X	X
xxxx0010	2	X	X			"	2	B	R	b	r	ß	X	X	X	X	X	X	X	X
xxxx0011	3	X	X			#	3	C	S	c	s		X	X	X	X	X	X	X	X
xxxx0100	4	X	X			\$	4	D	T	d	t	ä	ö	X	X		Ä	X	ä	X
xxxx0101	5	X	X			%	5	E	U	e	u		X	X	X	X	X	X	X	X
xxxx0110	6	X	X			&	6	F	V	f	v		X	X	X	X	X	Ö	X	ö
xxxx0111	7	X	X			'	7	G	W	g	w		X	X	X	X	X	X	X	X
xxxx1000	8	X	X			(8	H	X	h	x		X	X	X	X	X	X	X	X
xxxx1001	9	X	X)	9	I	Y	i	y		X	Ö	X	X	X	X	X	X
xxxx1010	A	<CR>*	X			*	:	J	Z	j	z		X	Ü	X	X	X	X	X	X
xxxx1011	B	X	X			+	;	K	[k	{		X	X	X	X	X	X	X	X
xxxx1100	C	X	X			,	<	L	\	l			X	X	X	X	X	Û	X	ü
xxxx1101	D	<CR>*	X			-	=	M]	m	}		X	X	X	X	X	X	X	X
xxxx1110	E	X	X			.	>	N	^	n	~	Ä	X	X	X	X	X	X	X	X
xxxx1111	F	X	X			/	?	O	_	o	■		X	X	X	X	X	ß	X	X

X means not available

*Carriage Return: The cursor jumps to the beginning of the next line.

Any Windows character set, as well as any user defined character set can be used.

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface


5.2 Factory Settings of the internal Interface

If the display can not be controlled, although a “PING” command to it’s IP address shows a response, please check the settings of “Channel 1”.

- Establish a Telnet connection to port 9999:
`TELNET XXX.XXX.XXX.XXX 9999 <CR>`

After the connection has been established, immediately press the enter key (within 5 seconds) in order to enter the setup mode.

- Enter “1” (Channel 1) and check the following settings:

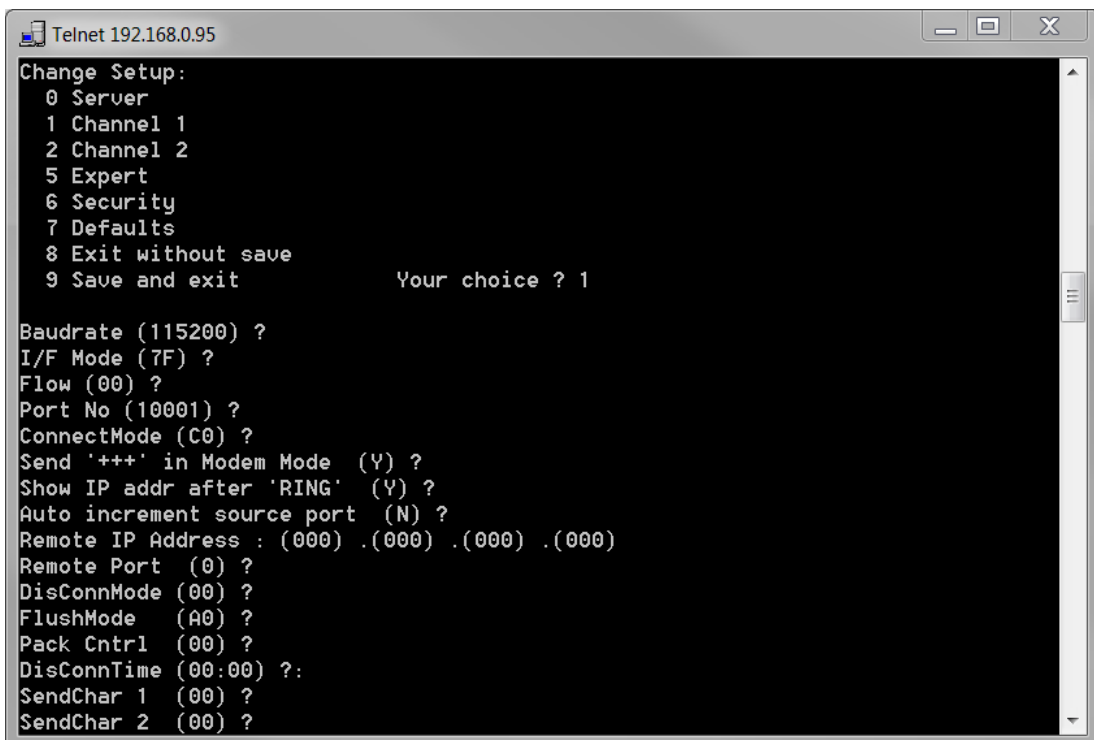

```

Telnet 192.168.0.95
Change Setup:
0 Server
1 Channel 1
2 Channel 2
5 Expert
6 Security
7 Defaults
8 Exit without save
9 Save and exit          Your choice ? 1

Baudrate (115200) ?
I/F Mode (7F) ?
Flow (00) ?
Port No (10001) ?
ConnectMode (C0) ?
Send '+++ in Modem Mode (Y) ?
Show IP addr after 'RING' (Y) ?
Auto increment source port (N) ?
Remote IP Address : (000) .(000) .(000) .(000)
Remote Port (0) ?
DisConnMode (00) ?
FlushMode (A0) ?
Pack Cntrl (00) ?
DisConnTime (00:00) ?
SendChar 1 (00) ?
SendChar 2 (00) ?

```

- If any changes have been done, press “9” (Save and exit) to save all settings.
-> The Telnet connection is interrupted.

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

5.3 Maintenance and Care

Observe the following instructions in order to assure best possible performance of the display:

- Make sure that the housing can be opened for adjustment and maintenance even after the display has been installed. Allow for adequate clearance at the back, front and top of the display unit in order to assure sufficient ventilation (if vent slots are included).
- Display quality is impaired by direct illumination with bright light sources and/or direct sunlight.
- The display must be switched off before cleaning.
- Protect the display from excessive humidity, extreme vibration, direct sunlight and extreme temperatures. Non-observance may lead to malfunctioning or destruction of the device. Under certain circumstances electrical shock, fire and explosion may occur as well. Information concerning allowable ambient conditions, in particular recommended temperature ranges, can be found in the chapter entitled "Technical Data".
- The display may not be placed into service if the device and/or the power cable are known to be damaged.
- Do not attempt to repair the device yourself. The guarantee is rendered null and void if the device is tampered with by unauthorised persons.
- Observe all notes and instructions included in this user's manual.

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

5.4 Declaration of Conformity

EU-Konformitätserklärung

EU Declaration of Conformity

Produktbezeichnung: migra

Product name:

Typenreihe: migra EN TCP/IP

Type code:

Hersteller: microSYST Systemelectronic GmbH

Manufacturer: Am Gewerbepark 11
92670 Windischeschenbach

Das bezeichnete Produkt stimmt mit der folgenden Europäischen Richtlinie überein: <i>We herewith confirm that the above mentioned product meets the requirements of the following standard:</i>		Die Übereinstimmung des bezeichneten Produktes mit den Vorschriften der angewandten Richtlinie(n) wird nachgewiesen durch die Einhaltung folgender Normen / Vorschriften: <i>The conformity of the product described above with the provisions of the applied Directive(s) is demonstrated by compliance with the following standards / regulations:</i>
Richtlinien / Directives		Europäische Norm / Standard
EMV Richtlinie <i>EMC Directive</i>	2014/30/EU	EN61000-6-2:2005
		EN61000-6-4:2007 +A1:2011
Niederspannungs-Richtlinie <i>Low Voltage Directive</i>	2014/35/EU	EN IEC 62368-1:2021-05
RoHS Richtlinie <i>RoHS Directive</i>	2011/65/EU	EN50581:2012

Windischeschenbach, 04.05.2021



Manuel Raß

Geschäftsführer / General Manager

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

5.5 Warranty / Liability

For the product, liability is assumed for defects, which existed at the delivery date according to our General Terms and Conditions.

Technically changes as well as errors are excepted. A claim for delivery of a new product does not exist. The buyer has to check the received product immediately and indicate evident defects at the latest 24 hours after detection. Non-observance of notification requirements is equated with acceptance of the defect. Not immediately visible defects have to be indicated immediately after their perception too.

Generally, defects and their symptoms must be described as accurately as possible in order to allow for reproducibility and elimination. The buyer must provide for access to the relevant device and all required and/or useful information at no charge and must make all of the required data and machine time available free of charge.

The guarantee does not cover defects, which result from non-observance of the prescribed conditions of use, or from improper handling.

If the device has been placed at the disposal of the buyer for test purposes and has been purchased subsequent to such testing, both parties agree that the product is to be considered "used" and that it has been purchased "as is". No guarantee claims may be made in such cases.

The General Terms and Conditions of microSYST Systemelectronic GmbH in current version apply as well.

migra MPB EN TCP/IP

Large Format, Graphics Compatible Display with Ethernet Interface

5.6 Versions Overview

Version	Date	Remark, Description
1.00	1/09/02	Kreuzer
1.30	2/06/02	Kreuzer: Receiving timeout changed
1.40	2/12/02	Kreuzer: Chapter „Input-dependent Macro execut.“ added
1.50	5/6/02	Kreuzer: New dummy „*“ added
X-M32-DAXXEX-002	8/30/02	Landgraf: Picture Pin assignments changed; connector RS232-download interface added
2.10	11/21/02	Kreuzer: Chapter Header: SA, DA changed
2.20	9/12/02	Kreuzer: New logo
2.30	01/23/03	Kreuzer: New designation Rx/Tx (+/-)
2.40	9/9/03	Kreuzer: Description of the control unit
2.50	6/28/04	Kreuzer: Download via RS232 resp. RS485
3.00	10/25/04	Kreuzer: Max. resolution expanded to 4x8 display modules
3.10	1/31/05	Kreuzer: Texts, graphics etc. are 0-based
3.20	8/9/05	Kreuzer: Maximum resolution is 4x12 display modules, several ESC sequences in a row are possible, signed integer coded decimal values at bargraphs removed
3.30	3/7/06	Kreuzer: Separator between several partition frames
3.40	8/16/10	Technical data updated
3.50	9/11/12	Factory Settings of Ethernet Interface
3.60	10/25/12	Ethernet configuration: Tips for Windows 7 users
3.70	3/21/13	Company address, declaration of conformity, warranty changed
3.80	10/18/13	Logo
3.90	3/19/15	SC/MC removed, description controller board
4.00	4/28/16	Declaration of conformity
5.00	10/20/16	migra → migra MPB
5.10	11/13/17	Change of address and title MPB
5.20	2/2/21	Declaration of Conformity
5.30	5/4/21	Declaration of Conformity

Certified per **DIN EN ISO 9001**.